


VSNTF: LEVEL COMPENSATOR WITH BRAKE

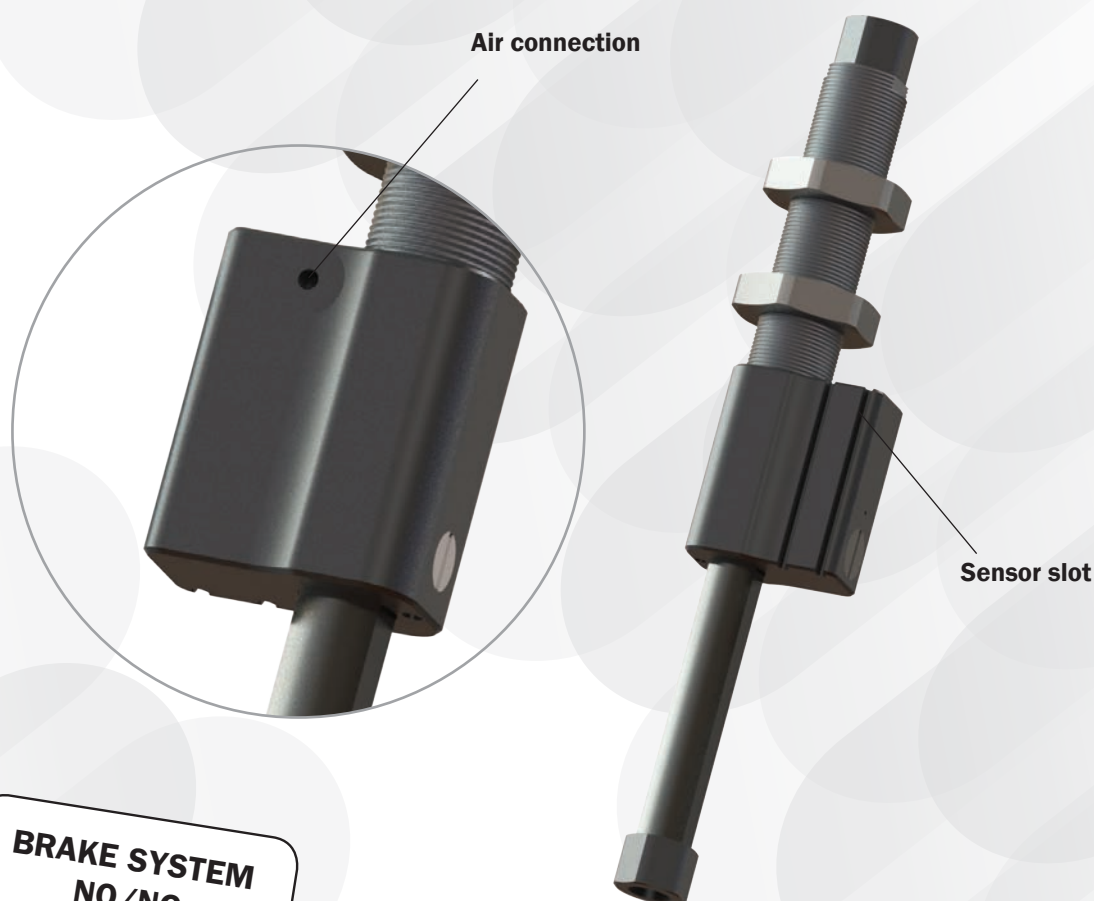

**BRAKE SYSTEM
NO/NC**

This new smart suspension provides the same features of a standard lever compensator with the additional brake unit that can lock the rod in any stroke position. It can be driven with a single effect pneumatic signal, normally close or normally open depending to the application requirements. The concept, made for high load capability, can be extended to a complete range of suspensions in different sizes and strokes.

- For large frames with variable heights, you don't need to reduce manually the suspension strokes
- For complex molded parts where is required a precise level position
- For sensing applications where the suspension adapts itself and follows the frame shape.
- 500N braking Force
- Sensors on brake
- Non-rotative rod
- 100mm stroke
- NO brake or NC brake version



Gimatic Srl - Via E. Ferrari 2/4 - 25030 Roncadelle (BS) T. 030 2584655 - F. 030 2583886
E. info@gimatic.com - W. www.gimatic.com - C.F e P.I. IT02969010178

CONCEPT